




HIGH PRESSURE  
WASHING FORBIDDEN

## TECHNICAL SPECIFICITIES

- Unik4 connected directly to the battery
- Voltage: 12 to 24V
- Protection by a 5A fuse

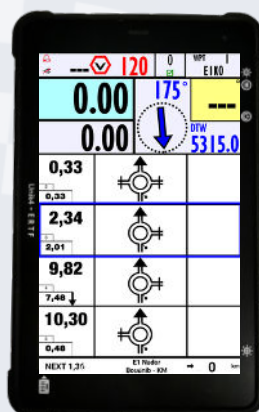

**Screen Size**  
8 inches



**GPS Dimensions**  
227 x 142 x 55 mm



**GPS Weight**  
1,20 kg

## MANDATORY ACCESSORIES




### BRACKET


The bracket must be mounted vertically as shown.  
The fixation to the dashboard must include the silent-blocs.  
There must be enough clearance between the dashboard and the bracket to access cables easily.

SUPC-209


### DRILLING DIMENSIONS

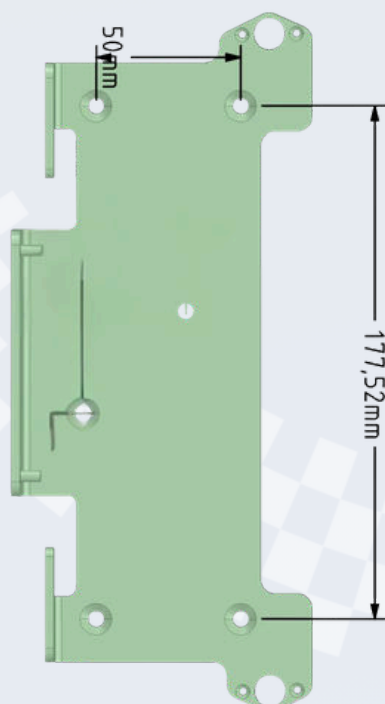

### SILENT-BLOCS

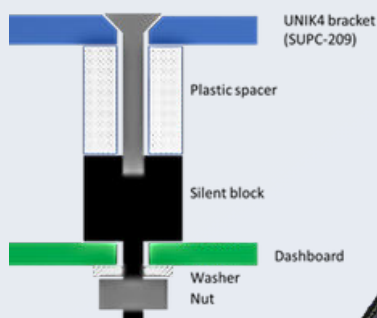

SIBA-209

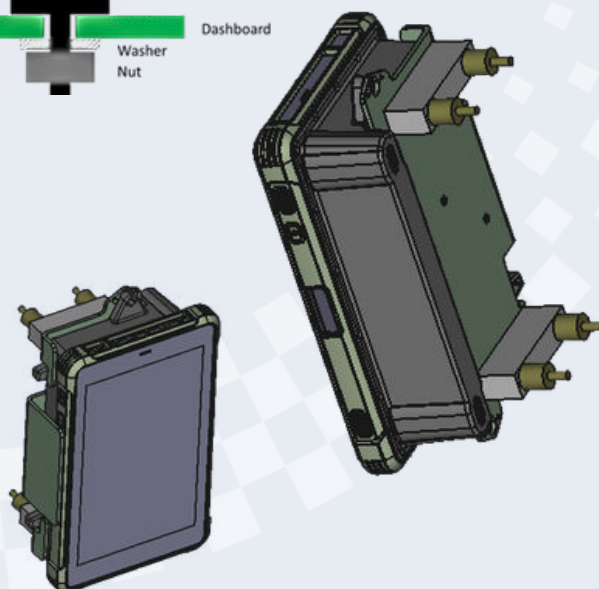



CALC-205

## POWER CABLE

12V to 24V.

Protection by a 5A fuse

**⚠ The vehicle's main circuit breaker must act on the positive but the Unik4 must be connected directly.**


Prepare a power cable from the battery to where the Unik4 will be installed, equipped with terminals and a Faston connector not supplied (see details below).

This cable must be protected from any pinching or friction.

Faston and Terminals References:

Connecteur Faston: TE Connectivity 180907-0 Cosses:

TE Connectivity 42238-2, serial FASTIN-FASTON

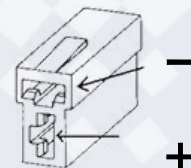

SONO-109


## SENTINEL BUZZER

Connects to the Buzzer Cable from the GPS.

Must not be obstructed.

## BUZZER CABLE

To connect the buzzer to the GPS.

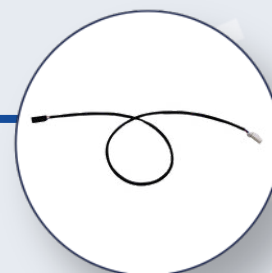

SONO-208



AEGPS-102

## MAGNETIC GPS ANTENNA

The upper part of the antenna (ERTF logo) must point towards the sky and must not be obscured by metal or carbon fiber objects, nor painted.

## REMOTE CONTROL

To connect to the Media connector from the GPS.



TECO-104



AESE-106

## SENTINEL ANTENNA

Installation of the antenna with the 2 collars and spacers provided (MANDATORY), on the vertical arch on the right side, in its upper part and closest to the windshield.

**⚠ IMPORTANT:** The Sentinel radio antenna must see the road and must be at least 2cm away from any surface (no mounting against the dashboard).